

Aleis International Pty Ltd
 ISO 9001 : 2000
 ACN 081 411 734 ABN 33 041 655 292

Head Office
 Cnr Old Rosevale Road
 Jandowae QLD 4410 Australia

Postal
 PO Box 63 Jandowae
 Qld 4410 Australia

P 07 4668 5941
F 07 4668 5946
E sales@aleis.com
W www.aleis.com



Model 6141

Bluetooth Model Numbers (Must be requested at time of order)



6141BT: Reader inbuilt BT only

6141BTSD: Reader inbuilt BT and scale external BT dongle

Includes Free

- Easy to follow User Guide
- 5m hard wired external power lead
- 5m hard wired serial data lead
- USB serial adaptor

“SCALEMATES ARE NOT DESIGNED FOR AUTOMATION
For reading stationary animals of a similar height
No storage capacity. Reads direct to Scale indicator or Laptop
Will read direct to PDA if unit is Bluetooth”

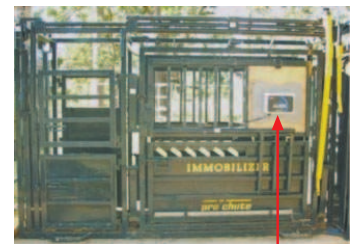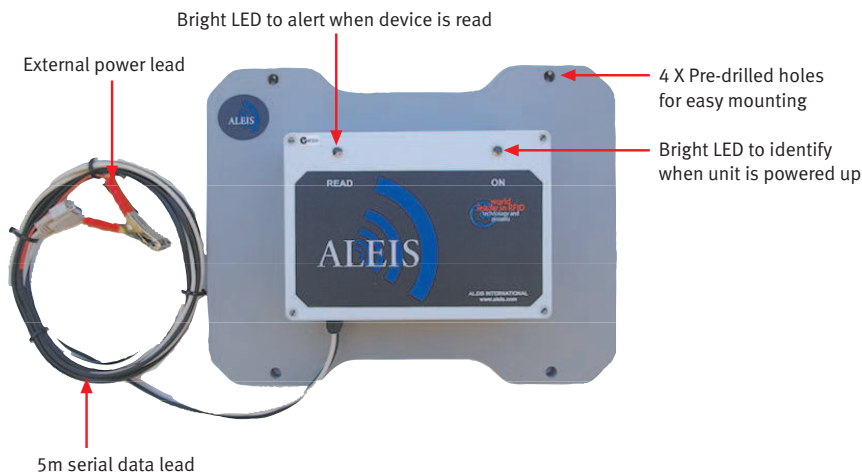

ScaleMate must be mounted on timber when in crush

FEATURES & BENEFITS	SPECIFICATIONS
<ul style="list-style-type: none"> ✓ Reads all NLIS ear tags ✓ Compatible with all major scales and software ✓ Built especially for the livestock industry (robust and reliable) ✓ Use in all weather conditions ✓ Reads directly to scale indicator or laptop ✓ Reads direct to PDA if unit is fitted with Bluetooth ✓ No need to tune ✓ Distinctive tones and very bright LED's identify when device is read ✓ Seven day a week help line to original purchaser for first 12 months (conditions apply) <p>This model is suitable for direct connection to scales, computer or PDA. Has no memory.</p>	<ul style="list-style-type: none"> ▪ Weight: 7.1kg ▪ Power: External 12V DC power source required ▪ Data Security: No memory ▪ Antenna size: 368mm X 459mm ▪ Operating Temperature: -10°C to +60°C ▪ Operating Frequency: 134.2 kHz HDX (half duplex) ▪ Read Distance: Up to 1100mm ▪ Read Speed: 100 milliseconds ▪ Data Interface: Serial RS232 or (optional Bluetooth), Baudrate 9600, Data bits 8, Parity none, Stop bits 1 <p>OPTIONAL EXTRAS</p> <ul style="list-style-type: none"> ▪ USB Adaptor: Part number 4047 ▪ Transient protector: Part number 4059 ▪ Power supply 240/12V which accepts alligator clip ends: Part number 4054 ▪ Bluetooth dongle for computer - Serial: Part number 4058C ▪ Bluetooth dongle for computer - USB: Part number 4058

Aleis terms and conditions apply and specifications are subject to change without notice



Member since 2002



Certified AL064AUS 2004



Proudly Australian Made & Owned



N13249

Aleis International Pty Ltd
 ISO 9001 : 2000
 ACN 081 411 734 ABN 33 041 655 292
Head Office
 Cnr Old Rosevale Road
 Jandowae QLD 4410 Australia
Postal
 PO Box 63 Jandowae
 Qld 4410 Australia

P 07 4668 5941
F 07 4668 5946
E sales@aleis.com
W www.aleis.com



Model 8145

Bluetooth Model Numbers


8145BT: Reader inbuilt BT only

8145BTSD: Reader inbuilt BT and scale external BT dongle

Includes Free

- Aleis DataLink for NLIS transfers
- Easy to follow User Guide
- 5m hard wired external power lead
- 5m hard wired serial data lead
- USB serial adaptor

“SCALEMATES ARE NOT DESIGNED FOR AUTOMATION
For reading stationary animals of a similar height
No storage capacity. Reads direct to Scale indicator or Laptop
Will read direct to PDA if unit is Bluetooth”

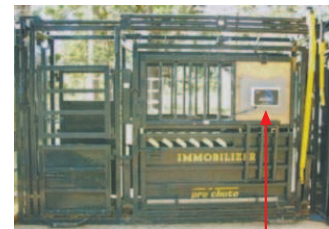

ScaleMate must be mounted on timber when in crush

Alerts can be set for selected parameters

If tag file bucket is uploaded screen displays the following:

- NLIS number
- Lifetime traceability
- Tag issue date
- Latest transfer date

ON / OFF

Date & time

Battery status

Press to start NEW session



Visual RFID number

Scroll keys to view full MENU, previous sessions and RFID records

Full reader MENU

Order read / total count in current session

Press to END session

FEATURES & BENEFITS	SPECIFICATIONS
<ul style="list-style-type: none"> ✓ User friendly Aleis NLIS DataLink transfer software ✓ Compatible with all major scales and software ✓ No need to tune ✓ Built especially for the livestock industry (robust and reliable) ✓ Use in all weather conditions ✓ Reads all NLIS ear tags ✓ Up to 100,000 RFID Storage ✓ Up to 1,000 sessions with a max of up to 4,000 RFID's per session ✓ Distinctive tones and very bright LED's identify a device read and stored ✓ Will NOT duplicate animal RFID in current session unless selected ✓ Ability to compare new and previous sessions ✓ Alert messages and comparisons ✓ Simple upload of tag file bucket into reader where NLIS numbers and life time traceability can be viewed or compared ✓ Ability to clear the visual memory from the reader ✓ Reads and stores RFID number for easy download at a later time or ✓ Sends RFID number direct to scale indicator, laptop or PDA ✓ Seven day a week help line to original purchaser for first 12 months (conditions apply) 	<ul style="list-style-type: none"> ▪ Weight: 7.1kg ▪ Power: External 12V DC power source required ▪ Data Security: Non-volatile memory ensures all stored RFID's are safe. Dual memory backup function ▪ Antenna size: 368mm X 459mm ▪ Operating Temperature: -10°C to +60°C ▪ Operating Frequency: 134.2 kHz HDX (half duplex) ▪ Read Distance: Up to 1100mm ▪ Read Speed: 100 milliseconds ▪ Data Interface: RS232 or (optional Bluetooth), Baudrate 9600 to 115200, Data bits 8, Parity none, Stop bits 1 ▪ High speed data transfers <p>OPTIONAL EXTRAS</p> <ul style="list-style-type: none"> ▪ USB Adaptor: Part number 4047 ▪ Transient protector: Part number 4059 ▪ Power supply 240/12V which accepts alligator clip ends: Part number 4054 ▪ Bluetooth dongle for computer - Serial: Part number 4058C ▪ Bluetooth dongle for computer - USB: Part number 4058

Aleis terms and conditions apply and specifications are subject to change without notice



Member since 2002



Certified AL064AUS 2004



Proudly Australian Made & Owned



N13249

Aleis International Pty Ltd
 ISO 9001 : 2000
 ACN 081 411 734 ABN 33 041 655 292
Head Office
 Cnr Old Rosevale Road
 Jandowae QLD 4410 Australia
Postal
 PO Box 63 Jandowae
 Qld 4410 Australia

P 07 4668 5941
F 07 4668 5946
E sales@aleis.com
W www.aleis.com



ALEIS

Model 9141

Bluetooth Model Numbers



9141BT: Reader inbuilt BT only

9141BTSD: Reader inbuilt BT and scale external BT dongle

Includes Free

- Aleis DataLink for NLIS transfers
- Easy to follow User Guide
- 5m hard wired external power lead
- 5m hard wired serial data lead
- USB serial adaptor

“SCALEMATES ARE NOT DESIGNED FOR AUTOMATION
For reading stationary animals of a similar height
No storage capacity. Reads direct to Scale indicator or Laptop
Will read direct to PDA if unit is Bluetooth”

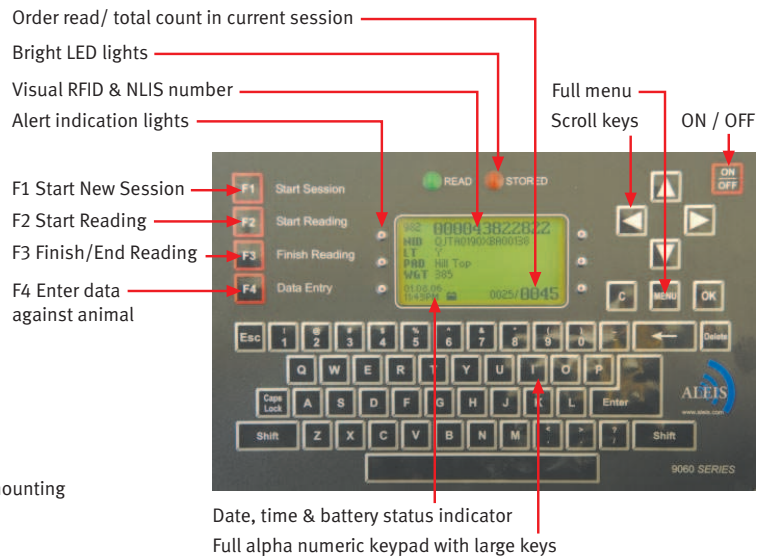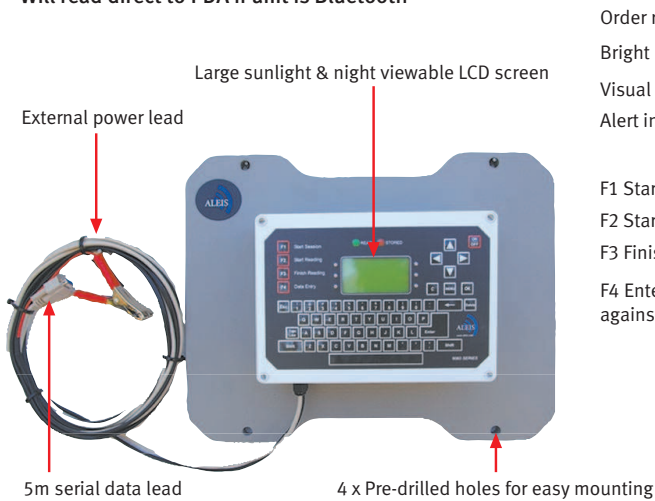

FEATURES & BENEFITS	SPECIFICATIONS
<ul style="list-style-type: none"> ✓ Reads all NLIS ear tags ✓ Compatible with all major scales and software ✓ Built especially for the livestock industry (robust and reliable) ✓ Use in all weather conditions ✓ User friendly Aleis DataLink NLIS transfer software ✓ No need to tune ✓ Distinctive tones and very bright LED's identifying a device read and stored ✓ Will NOT duplicate animal RFID in current session unless selected ✓ Simple upload through Aleis DataLink of tag file bucket into reader where NLIS numbers and lifetime traceability can be viewed or compared ✓ Up to 100,000 RFID storage or up to 40,000 full data records ✓ Up to 1,000 sessions with a max of up to 4,000 RFID's per session ✓ 4 X 16 character data entry fields ✓ Up to 5 templates can be pre-set on reader ✓ Alert messages and comparisons ✓ Ability to clear the visual memory from the reader ✓ Reads and stores RFID number for easy download later or ✓ Sends RFID number direct to scale indicator, laptop or PDA ✓ Seven day a week help line to original purchaser for first 12 months (conditions apply) 	<ul style="list-style-type: none"> ▪ Weight: 7.1kg ▪ Power: External 12V DC power source ▪ Data Security: Non-volatile memory ensures all stored RFID's and data are safe even if battery goes flat ▪ Dual memory backup function ▪ Antenna size: 368mm X 459mm ▪ Operating Temperature: -10°C to +60°C ▪ Operating Frequency: 134.2 kHz HDX (half duplex) ▪ Read Distance: Up to 1100mm ▪ Read Speed: 100 milliseconds ▪ Data Interface: RS232 or (optional Bluetooth), Baudrate 9600 to 115200, Data bits 8, Parity none, Stop bits 1 ▪ High speed data transfers <p>OPTIONAL EXTRAS</p> <ul style="list-style-type: none"> ▪ USB Adaptor: Part number 4047 ▪ Transient protector: Part number 4059 ▪ Power supply 240/12V which accepts alligator clip ends: Part number 4054 ▪ Bluetooth dongle for computer - Serial: Part number 4058C ▪ Bluetooth dongle for computer - USB: Part number 4058

Aleis terms and conditions apply and specifications are subject to change without notice



Member since 2002



Certified AL064AUS 2004



Proudly Australian Made & Owned



N13249